

**Consumer Loudspeaker Component Series
to Professional Series Substitution Cross-Reference****Networks**

<u>Consumer Model</u>	<u>Professional Model</u>
LX5	3115A
LX10	None, Use 3120
LX13	3110A
LX14	None
LX30	None, Use 3110A and 3105
LX50A	None, Use 3115A
LX80	None, Use 3110A
LX200B	None, Use 3110A
LX300	None, Use 3110A and 3105
N1200	3120A
N2400	None
N7000	3105
N8000	None, Use 3105

Transducers

<u>Consumer Model</u>	<u>Professional Model</u>
D208	None
LE8T-H	Available
LE10H-1	Available
124H	None, Use 2213H OR 128H
LE14H-1	Available
135H	None, Use 2235H
LE15H	None, Use 2235H OR 2234H
130H	2220H
140-4H	E145
D130H	None, Use E130
LE5H	2105H
LE21H	LE25-2
075	2402H
076	None, Use 2405H
077	2405H
LE175	2410
LE85	None, Use 2426H
376	2441

Horn and Lens Assemblies

<u>Consumer Model</u>	<u>Professional Model</u>
HL87	2301
HL88	None
HL89	2390
HL90	2395 (2382)
HL91	2307/2308
HL92	None
HL93	2311/2308