


# 4350 CABINET BRACING #1

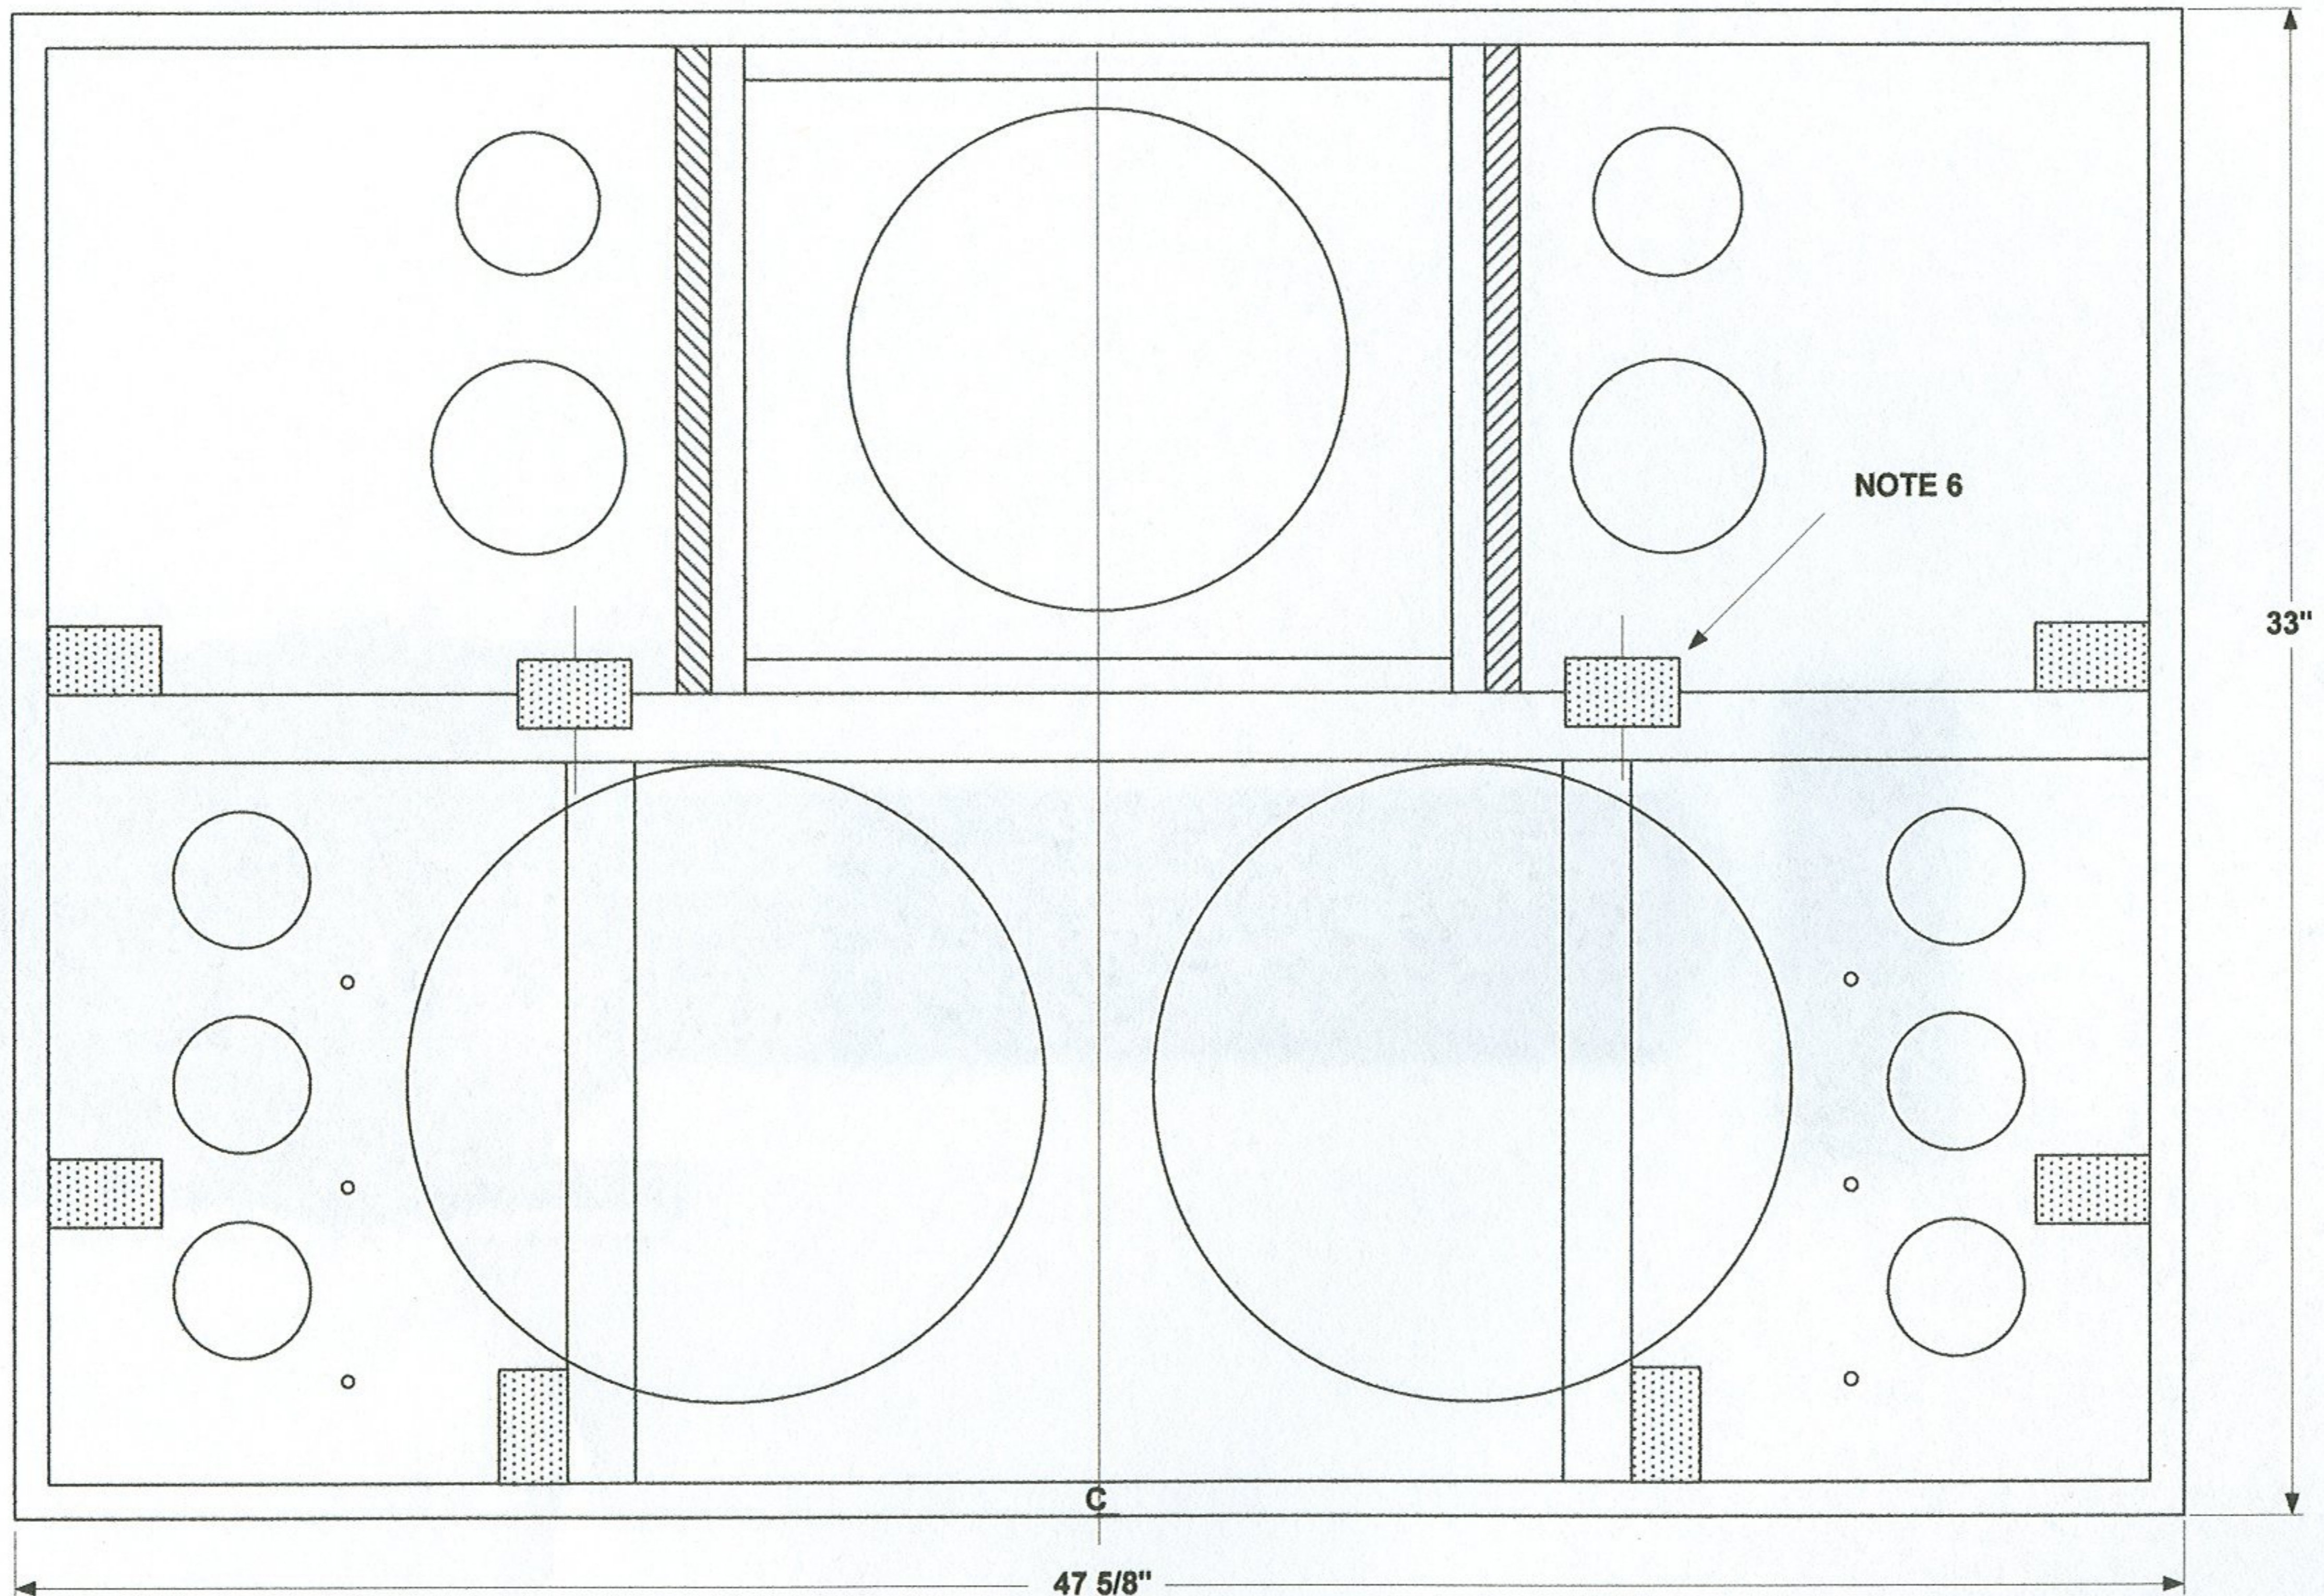

ALL INTERNAL CABINET BRACES ARE 1 ½" x 2 ½". FACTORY CABINETS USED INEXPENSIVE PINE. FIR OR POPLAR WOULD BE BETTER CHOICES. ALL BRACES ARE GLUED AND SCREWED TO THEIR RESPECTIVE PANELS PRIOR TO CABINET ASSEMBLY. ON SOME CABINETS, THAT APPEAR TO BE MID TO LATE PRODUCTION (4350'S), THE BACK BRACES WERE GLUED AND NAILED FROM THE OUTSIDE. THE NAIL HEADS ARE VISIBLE THROUGH THE BLACK PAINT ON THE CABINET BACK.

**NOTE 6** THE PURPOSE OF THIS BRACE IS TO PROVIDE SUPPORT FOR THE 2440 DRIVER WITH FACTORY INCLUDED METAL BRACKET. THIS BRACE WAS NOT USED ON THE VERY EARLY MODELS.